



Roundovers on the Table Saw


Shaping an irregular roundover, like the one shown in the photo, is not as difficult as you might think. Here's an easy three-step process for making smooth, clean roundovers using your table saw.

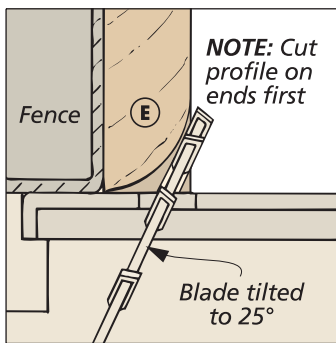

Step 1 — Tilt the saw blade to approximately 25° and position the workpiece vertically to make the first cut. Start on edges with end grain to avoid tearout.

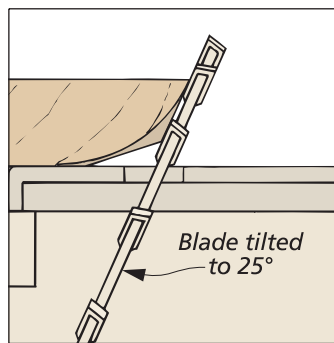

Step 2 — Flip the workpiece around and place it flat on the table to make your second cut.

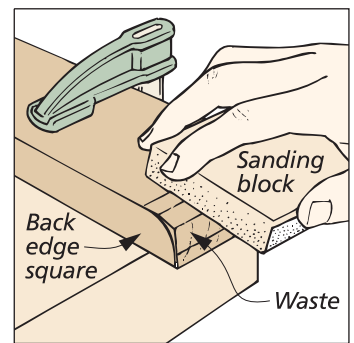

Step 3 — Sand or plane away the remaining waste to smooth out the roundover and complete the profile.