


100+ Bonus Woodworking Tips


Cabinets & Shelves

Plywood Edging Veneer

The grain and color of veneer edging tape doesn't always match the hardwood plywood used on a project. To solve this problem, you can make your own edging strips by removing a thin layer of veneer from your leftover scraps of plywood, as shown below.

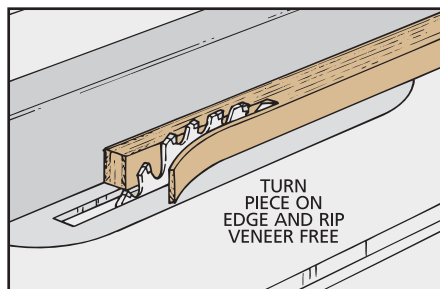

1 To cut the veneer free, turn the plywood on edge. Set the fence to remove the veneer and about $\frac{1}{32}$ " of the core material.

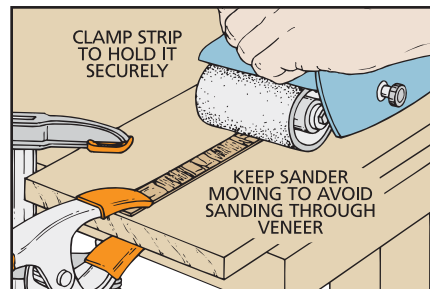

2 A belt sander quickly removes the excess core material from the veneer. Clamp the strip to a backing board while sanding.

Woodsmith®

ShopNotes®